


## INSTRUCTION MANUAL WALL CLOCK CUCKOO


KA5768, KA5964, KA5968, KA5867

**READ THIS INSTRUCTION MANUAL BEFORE USE  
AND KEEP THIS MANUAL FOR FUTURE REFERENCE.**

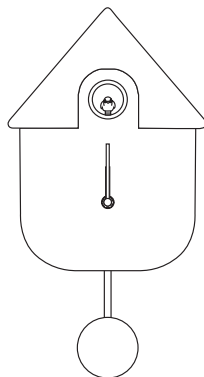


### STEPS BEFORE USE:

1 Before inserting the batteries, open the battery cover, turn the hands knob in the direction of the arrow, and set the time to 05:45 as shown below:

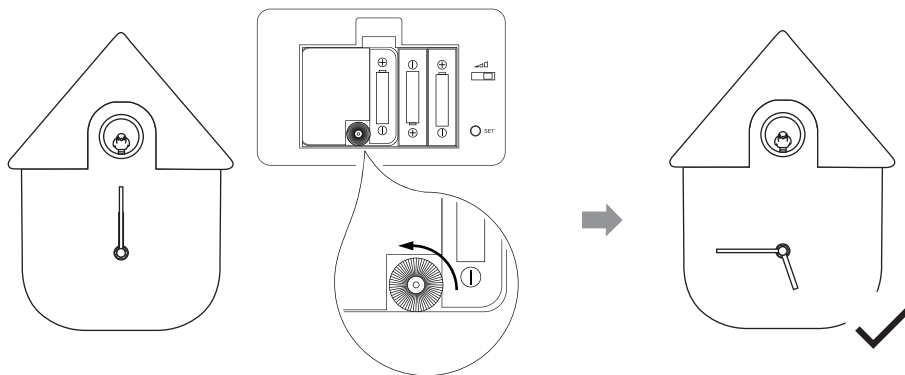


**! DO NOT TOUCH THE CLOCK HANDS TO SET TIME.**

2 Insert 3 AA batteries (not included) as illustrated.

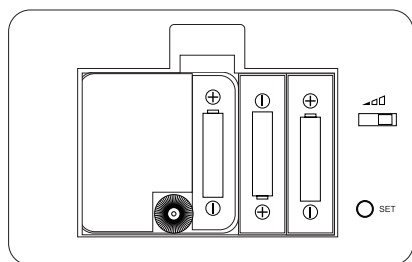


3 Continue to turn the hands knob in the direction of the arrow to set the current time.

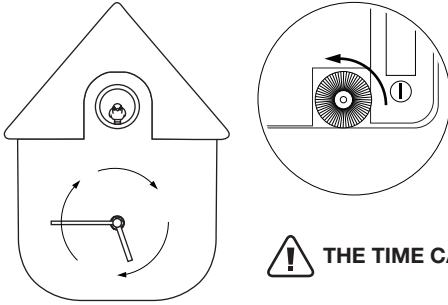


**! THE TIME CAN BE SET EVEN WHEN THE BIRD IS SINGING.**

The cuckoo will stop singing from 10 p.m. (22:00) to 5 a.m. (05:00), so the current time needs to be set correctly according to 24-hour mode. For example:


Set time for 9:25 a.m.

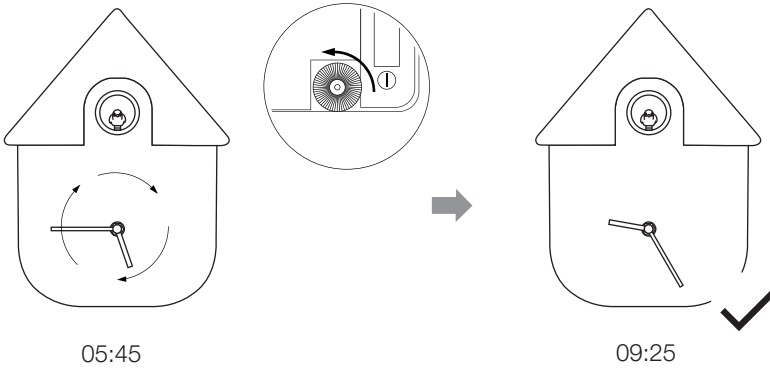




Set time for 9:25 p.m. ( 21:25 )

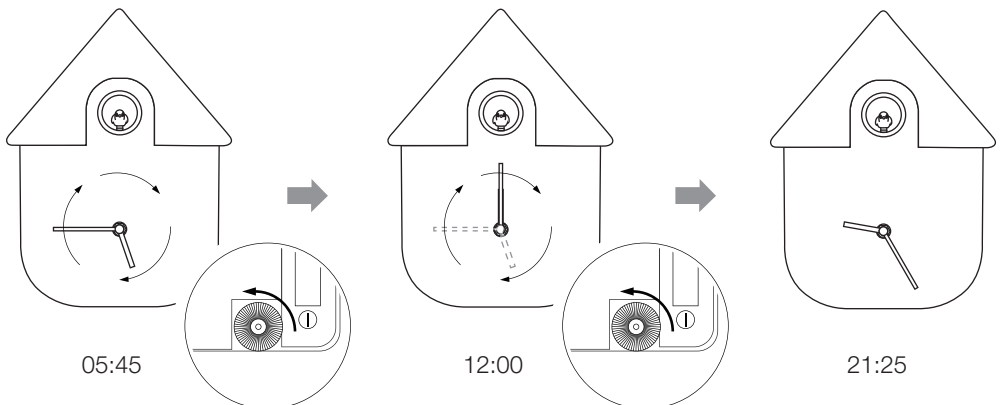

4 Close the battery cover after the time is set correctly. Do not press “SET” button during the process. Otherwise, please take out the batteries and re-set the time by following steps (1)~(4) above.

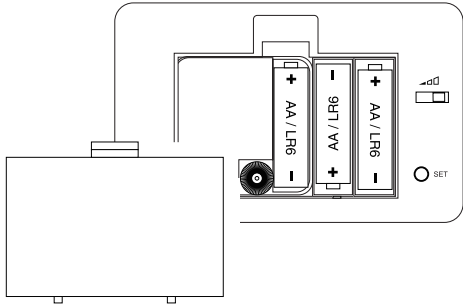


5 Release the pendulum driver and hang the pendulum to it.

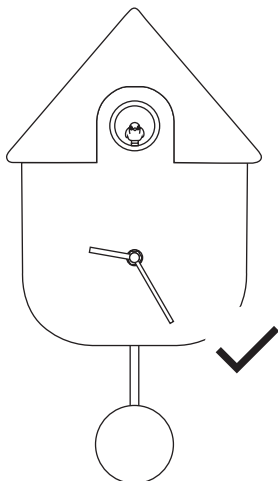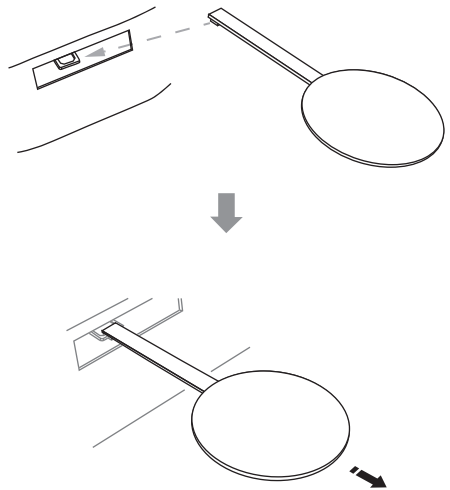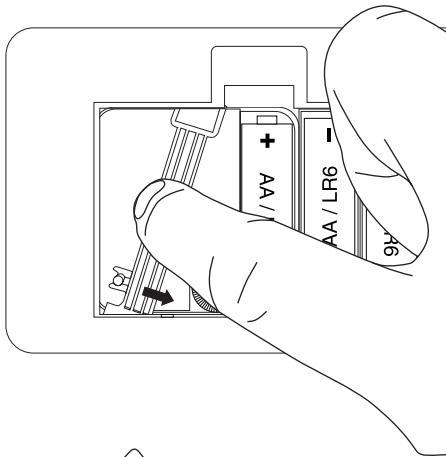

## CUCKOO SINGING FUNCTION:

The bird sound volume can be adjusted to three levels using the volume adjustment switch.

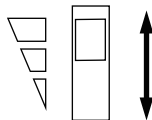

Cuckoo Silence Period: 10 p.m. (22:00) to 5 a.m. (05:00)

During this period, the cuckoo will not move or sing.

## TESTING THE CUCKOO SINGING

By pressing the “SET” button, the cuckoo will come out and sing. However, if the current time is within the silence period, the cuckoo may not come out or sing, even when the “SET” button is pressed. In this situation, please press the “SET” button multiple times until the cuckoo comes out and sings.



**AFTER PRESSING THE “SET” BUTTON, PLEASE TAKE OUT THE BATTERIES AND RE-SET THE TIME BY FOLLOWING “BEFORE USE” AT THE BEGINNING OF THE MANUAL.**

## CAUTION CHANGING BATTERIES:

To avoid battery leakage or explosion, please follow the below.

If the clock stops, either replace the batteries with new ones or remove the batteries.

Even when the clock is still working, change the batteries regularly once a year.



**WHEN CHANGING BATTERIES, PLEASE SET THE TIME BY REFERRING TO THE “BEFORE USE” AT THE BEGINNING OF THE MANUAL.**

Do not use rechargeable batteries. Use only alkaline batteries.

## TROUBLESHOOTING:

Check these points first if the product does not appear to be working properly.

PROBLEM	CAUSE & SOLUTION
<p>The time is slow or fast.</p>	<p>Time accuracy is affected by temperature which may cause the time to speed up or slow down. (Usable temperature : 0 - 40 °C) If the time inaccuracy builds up, make sure to turn the hands knob in the direction of the arrow to fix the correct time. Or to change batteries.</p>
<p>The sound of the song slows down. Or the clock is loose time.</p>	<p>Please change batteries.</p>
<p>When the cuckoo comes out and sings, there are noises other than the cuckoo sound.</p>	<p>This is the sound of the cuckoo or bird moving. It is not a malfunction.</p>
<p>The cuckoo does not move back to the house.</p>	<p>The cuckoo might not move back to the house during time setting process, because the current time is in silent period. Please leave it as it is, and the cuckoo will resume to move and sing after the silent period. Or you can move back the cuckoo by pressing "SET" button. But please take out the batteries and re-set the time by following "Step for use" steps (1)-(4) above.</p>
<p>Cuckoo silence period is not from 10 p.m. (22:00) to 5 a.m. (05:00).</p>	<p>Please take out the batteries and re-set the time by following "Step for use" steps (1)-(4) above.</p>



EN Manual  
 NL Handleiding  
 DE Bedienungsanleitung  
 FR Manuel d'instructions  
 IT Manuale utente  
 ES Manual de instrucciones  
 DK Brugervejledning  
 PL Podręcznik  
 PT Manual de instruções  
 SE Bruksanvisning











## Warranty

- EN** There is a two-year warranty against manufacture defects on all Karlsson clocks, valid from the date of purchase.
- NL** Er is een garantie van twee jaar op fabricagefouten op alle Karlsson-klokken, geldig vanaf de aankoopdatum.
- DE** Auf alle Karlsson-Uhren gibt es eine zweijährige Garantie auf Herstellungsfehler, die ab dem Kaufdatum gültig ist.
- FR** Il y a une garantie de deux ans contre les défauts de fabrication sur toutes les horloges Karlsson, valable à partir de la date d'achat.
- IT** Tutti gli orologi Karlsson sono coperti da una garanzia di due anni contro i difetti di fabbricazione, valida dalla data di acquisto.
- ES** Existe una garantía de dos años contra defectos de fabricación en todos los relojes Karlsson, válida a partir de la fecha de compra.
- DK** Der er to års garanti mod fabriktionsfejl på alle Karlsson-ure, der gælder fra købsdatoen.
- PL** Na wszystkie zegary Karlsson udzielana jest dwuletnia gwarancja na wady fabryczne, ważna od daty zakupu.
- PT** Há uma garantia de dois anos contra defeitos de fabricação em todos os relógios Karlsson, válida a partir da data de compra.
- SE** Det finns två års garanti mot fabriktionsfel på alla Karlssons klockor, gäller från inköpsdatum.

## Maintenance

- EN** A soft cloth may be used to clean your clock. Do not use corrosive cleaner or chemical solution on the clock.
- NL** Een zachte doek kan worden gebruikt om uw klok schoon te maken. Gebruik geen bijtende reiniger of chemische oplossing op de klok.
- DE** Ein weiches Tuch kann verwendet werden, um Ihre Uhr zu reinigen. Verwenden Sie kein ätzendes Reinigungsmittel oder eine chemische Lösung für die Uhr.
- FR** Un chiffon doux peut être utilisé pour nettoyer votre horloge. N'utilisez pas de nettoyeur corrosif ou de solution chimique sur l'horloge.
- IT** È possibile utilizzare un panno morbido per pulire l'orologio. Non utilizzare detergenti corrosivi o soluzioni chimiche sull'orologio.
- ES** Se puede usar un paño suave para limpiar el reloj. No use limpiadores corrosivos o solución química en el reloj.
- DK** En blød klud kan bruges til at rengøre dit ur. Brug ikke ætsende rengøringsmiddel eller kemisk opløsning på uret.
- PL** Do czyszczenia zegara można użyć miękkiej szmatki. Nie używaj środków czyszczących ani roztworów chemicznych na zegarze.
- PT** Um pano macio pode ser usado para limpar seu relógio. Não use produtos de limpeza corrosivos ou solução química no relógio.
- SE** En mjuk trasa kan användas för att rengöra din klocka. Använd inte frätande rengöringsmedel eller kemisk lösning på klockan.

## WEEE Symbol

-  **EN** The crossed-out wheeled bin symbol indicates that the item should be disposed of separately from household waste. The item should be handed in for recycling in accordance with local environmental regulations for waste disposal.
-  **ES** La imagen del cubo de basura tachado indica que el producto no debe formar parte de los residuos habituales del hogar. Se debe reciclar según la normativa local medioambiental de eliminación de residuos.
-  **NL** Het symbool met de doorgestreepte vuilnisbak op wiertjes geeft aan dat het product gescheiden van het huishoudelijk afval moet worden aangeboden. Het product moet worden ingeleverd voor recycling in overeenstemming met de plaatselijke milieuvoorschriften voor afvalverwerking.
-  **PL** Przekreślony symbol kosza na odpady oznacza, że oznaczony produkt nie może być wyrzucany wraz ze zmieszanyimi odpadami komunalnymi z gospodarstwa domowego. Zużyty sprzęt elektryczny i elektroniczny należy przekazać do przetworzenia i recyklingu zgodnie z obowiązującymi w danym kraju przepisami ochrony środowiska dotyczącymi gospodarowania odpadami.
-  **DE** Das Symbol mit der durchgestrichenen Abfalltonne bedeutet, dass das Produkt getrennt vom Haushaltsabfall entsorgt werden muss. Das Produkt muss gem. der örtlichen Entsorgungsvorschriften der Wiederverwertung zugeführt werden.
-  **PT** O símbolo do caixote do lixo com o sinal de proibição indica que esse artigo deve ser separado dos resíduos domésticos convencionais. Deve ser entregue para reciclagem de acordo com as regulamentações ambientais locais para tratamento de resíduos
-  **FR** Le pictogramme de la poubelle barrée indique que le produit doit faire l'objet d'un tri. Il doit être recyclé conformément à la réglementation environnementale locale en matière de déchets.
-  **DK** Táknið með mynd af ruslatunnu með krossi yfir þýðir að ekki má farga vörinni með venjulegu heimilissorpi. Vörinni þarf að skila í endurvinnslu eins og lög gera ráð fyrir á hverjum stað fyrir sig.
-  **IT** Il simbolo del cassonetto barrato indica che il prodotto non può essere eliminato con i comuni rifiuti domestici. Il prodotto dev'essere riciclato nel rispetto delle norme ambientali locali per lo smaltimento dei rifiuti.
-  **SE** Symbolen med den överkorsade soptunnan betyder att produkten ska kasseras separat från hushållsavfall. Produkten ska lämnas in för återvinning enligt lokala regler för avfallshantering.